



## How to upgrade the firmware of an NVR/DVR using the webUI

1. Log in to the NVR/DVR using a web browser and go to [Settings](#) > [System](#) > [Maintenance](#) and click [FW Update](#).

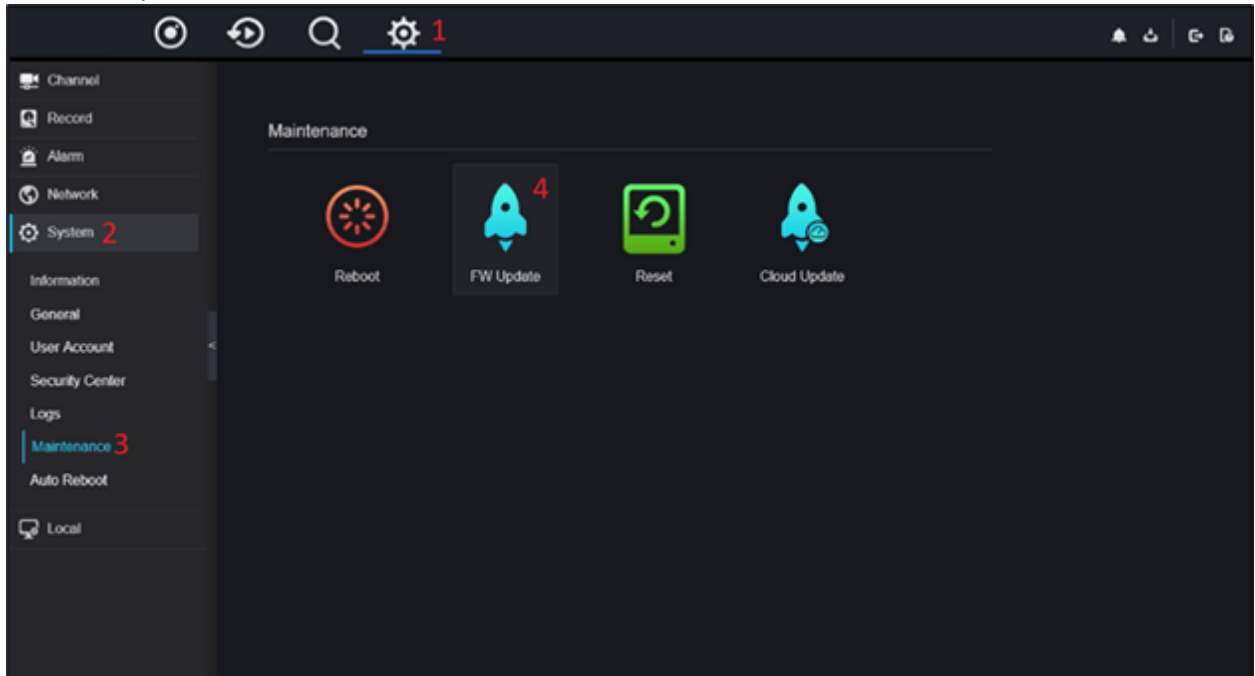

2. Select the correct firmware update file and click [Open](#).

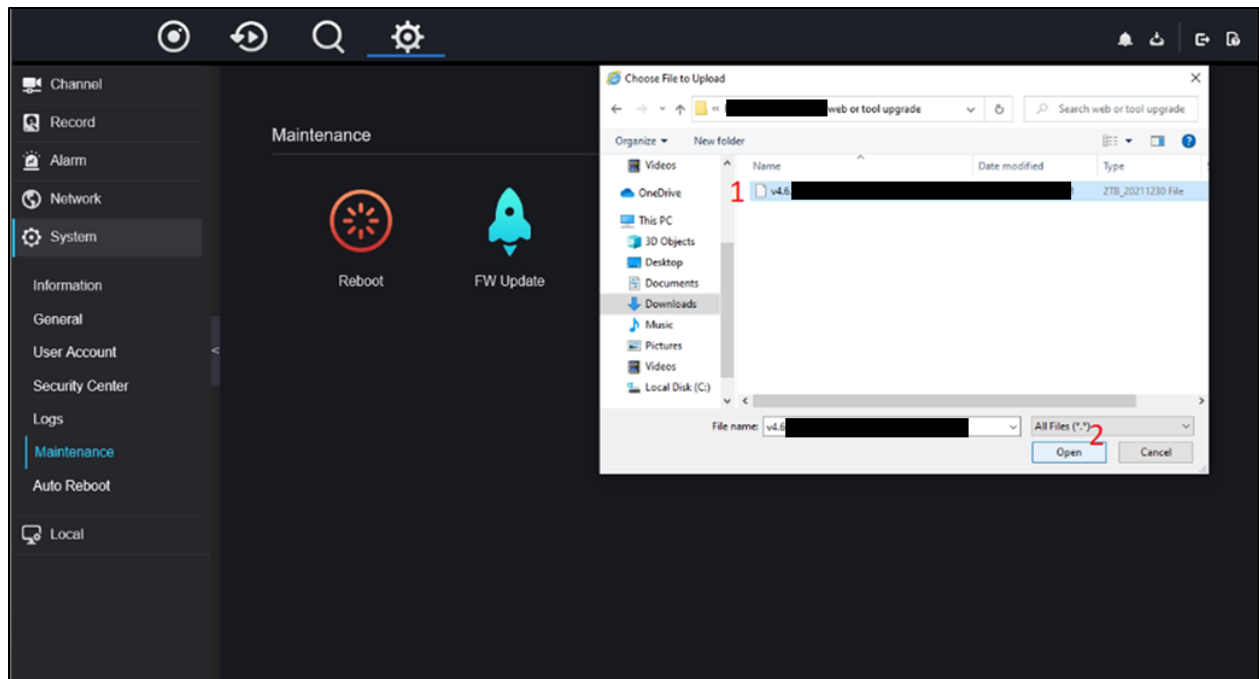

3. Wait for the update to be completed. The device will automatically reboot once has update has been completed.