

## RTSP URL for IP Cameras

### Without Password

- **URL Format** – rtsp://<device IP>:554/sn1/live/1/<Stream ID>
- **Device IP:** replace with the actual IP address of the device. Example: 192.168.1.64
- **Stream ID:** replace with 1, 2 or 3.
- **Example:** *rtsp://192.168.0.120:554/live/1/1*

### With Password

- **URL Format** – rtsp://username:password@<device IP>:554/sn1/live/1/<Stream ID>
- **Username:** replace with camera username
- **Password:** replace with camera password
- **Device IP:** replace with the actual IP address of the device. Example: 192.168.1.64
- **Stream ID:** replace with 1, 2 or 3.
- **Example:** *rtsp://admin:admin123@192.168.0.120:554/live/1/1*

### Notes:

- Port 554 is the default RTSP port number of the camera. If you changed this port number in the device setting, you need to use the new RTSP port number in the RTSP URL.
- Make sure that you also have the username and password of the camera as it is needed to access the devices via RTSP.